

abi IMAGE Express Tripod Screen Instructions

IMAGE Express tripod screens are supplied in 2 parts :

Screen casing with screen


Tripod Stand

Assembly Instructions

1. Remove the tripod from the packaging, open the three support feet and position the tripod on the floor ready to attach the screen.
2. Hold the screen case at right angles to the stand with the wire handle facing up.
3. The join support on the screen casing attaches to the lock mechanism on the tripod stand.
The red Lock 1 locks the case to the stand.
(Check that the case is locked on before letting go)
4. Pull the wire handle and attach the screen surface to the top of the tripod, or the keystone arm if required to square the image. The keystone arm rotates and locks in position when in use.



Tripod lock mechanism & legs

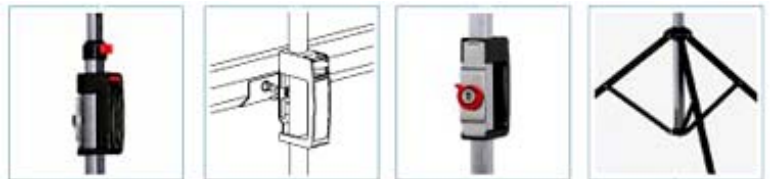


Keystone Arm



Changing the Height of the Screen

1. The tripod arm is telescopic, and can be raised or lowered by Button 1 to adjust the position of the top of the screen.
2. The bottom of the screen can be adjusted up or down using Button 2 on the tripod handle.

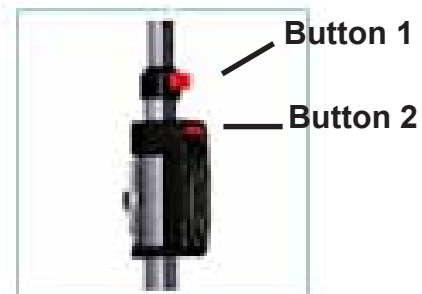

Packing Away

1. Lower the top of the screen using Button 1.
2. Remove the wire handle from the tripod so the screen surface can retract into the case.
3. The screen can be left attached to the tripod or removed if required. If left attached, swivel the case until aligned with the stand. One end of the case can be locked to the top of the tripod for ease of carrying.

**IG3 Education Ltd t/a
A Brighter Image**
P: (02) 9938 6866