



TheatreMax **Permanently Tensioned Screen**


Installation Instructions

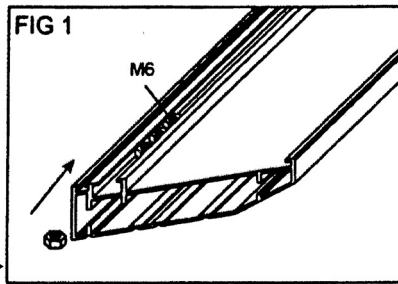

1 Slide 4 x M6 nuts into the long side slot, and 1 x M6 nut into each short side slot. (FIG 1)

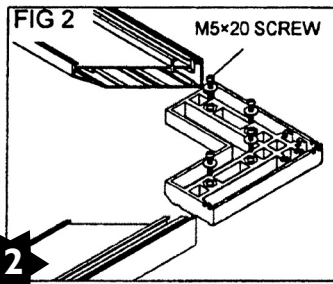


2 Insert plastic L-shape corner pieces to connect them (FIG 2)
NOTE: Refer FIG 2-1

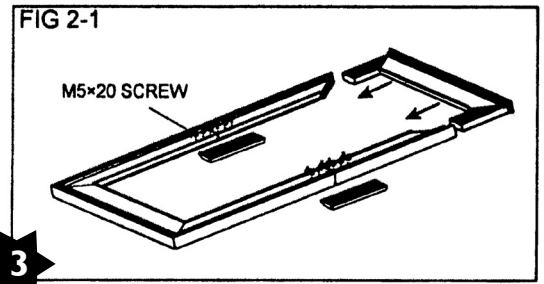

3 Connect short side last by inserting both corner pieces simultaneously. This will prevent distortion and possible damage to frame.


4 After corner pieces have been inserted, use the 10 x M5 screws to fix them in place.

5 Insert the spring hooks into the frame slot, and turn 90° (FIG 3)

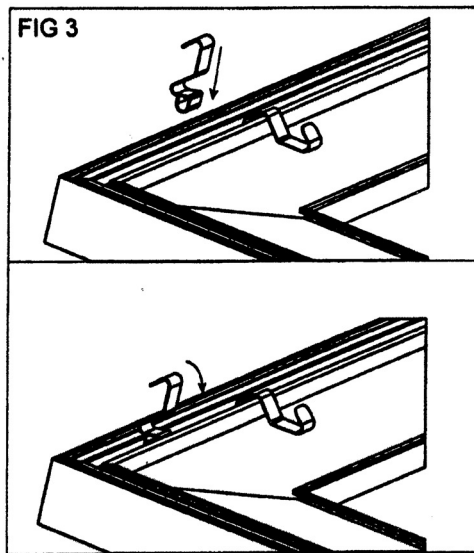


7 Attach the prepared fabric to the frame, using spring hooks in frame - short edges first.
NOTE: Slide spring hooks so that they are centred in the fabric hole.
Check and adjust for uniform flatness of fabric.

6 Insert steel rods into four edges of screen fabric - short edges first (FIG 4)

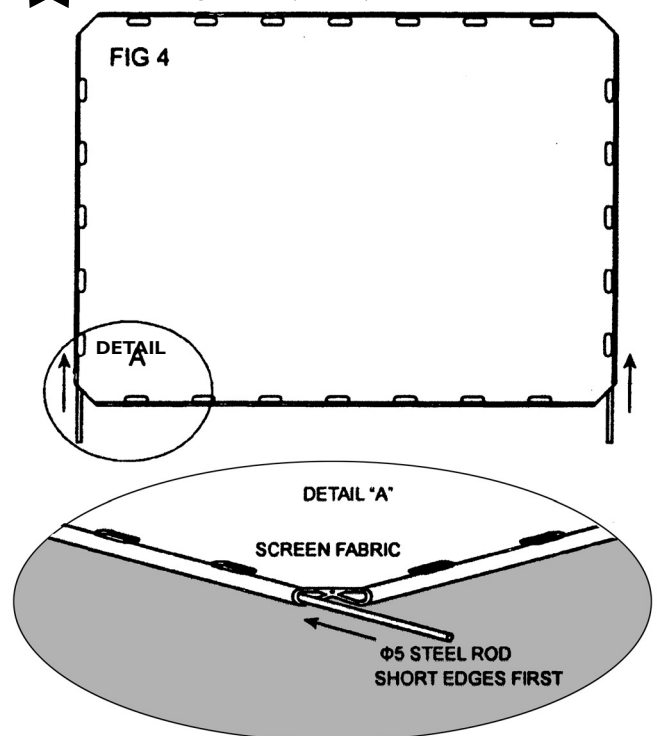

8 Use 12 x M6 screws to fix steel plates to frame (FIG 5)

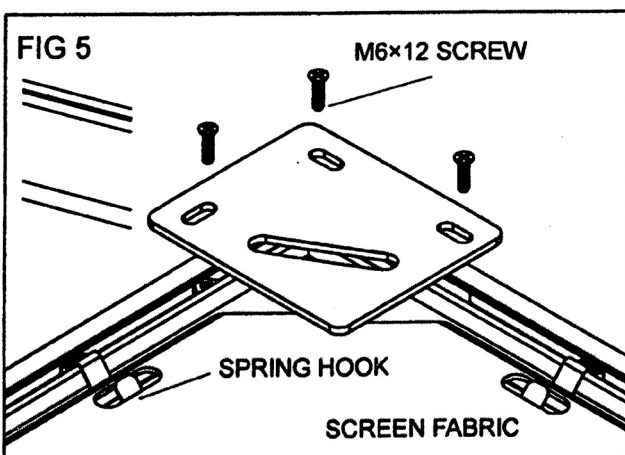

9 Attach screen frame to wall (FIG 6)

