 


Interactive Touchscreens

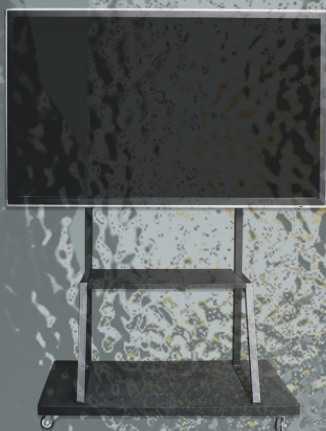

abi
a brighter image

INSTALLATION

- Locate the touchscreen in the room where direct light does not strike the screen. Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.
- Allow enough space between the touchscreen and the wall to permit ventilation. The brackets provided provide adequate ventilation space.
- This TV operates on a AC supply provided by the mains voltage of 100-240V.
- Do not install the receiver in a location near heat and cooling sources such as radiator, air ducts, direct sunlight, or in a sealed area. Excessive heat may damage components; cool air may cause condensation.
- Do not cover the ventilation openings when using the touchscreen.

CAUSES OF INTERFERENCE

Incorporated in your TV receiver are the most up-to-date devices to eliminate interference. Local radiation however, can create disturbances which visibly affect your picture. Proper installation, a good aerial is your best safe-guards against these disturbances.

RF INTERFERENCE

Moving ripples across the screen are caused by nearby transmitting or receiving short-wave radio equipment.

DIATHERMY

Herringbone pattern and partial picture loss can result from the operation of diathermy equipment from a nearby doctor's surgery or hospital.

SNOW

Weak TV signals from long distant stations result in an instead picture and give the effect of falling snow. An antenna adjustment or antenna amplifier may be needed.

GHOST

Multiple images caused by TV signals reflected back from surrounding buildings, hills, aircraft, etc. is minimized by correct aerial positioning.

CAR IGNITION

Nearby cars and electrical motors can cause small streaks across the picture or make the picture roll.

CAUTION

Never tamper with any components inside your set, or any other adjustment controls not mentioned in this manual.

The LCD panel used in this product is made of glass. Therefore, it can break when the product is dropped or applied with impact. Be careful not to be injured by broken glass pieces in case the LCD panel breaks. When you clean up dust or stick of a water drop on the LCD panel, the power cord should be pulled out from the plug receptacle, then wipe the receiver with dried soft cloth. During thunder and lighting, unplug the power cord and antenna cord to prevent your TV set from damage. All "inside work" on your receiver should be performed only by the TV service personnel. All television receivers are high voltage instruments.

CONTENTS

ABI TSLED70V2 - 70" LED Backlit Touchscreen

ABI TSLED65V2 - 65" LED Backlit Touchscreen

ABI TSLED55V2 - 55" LED Backlit Touchscreen

PAGE 4 What's in the box
 Connecting your LCD Touchscreen

PAGE 5 Connections and Controls

PAGE 6 Switching on

PAGE 7 Calibrating your LCD Touchscreen

PAGE 8 Remote control use

PAGE 9 Remote control Functions

PAGE 11 Troubleshooting

A Brighter Image Pty Ltd ABN 498 205 091 42
PO Box 1250 BROOKVALE NSW 2100
Phone: 02 9938 6866
Email: info@abimage.com.au



WHAT'S IN THE BOX

 
Inside the Touchscreen packaging you will find an Accessories box containing:

- 2 x Stylus Pens
- 1 x Remote Control with 2 x AAA Batteries
- 1 x Power Cable
- 1 x VGA Cable
- 1 x HDMI Cable
- 1 x 5m Active USB Extender Cable
- 1 x 3.5mm PC Audio Cable
- 1 x Software CD

CONNECTING YOUR LCD TOUCHSCREEN

Picture from your PC

Connect the monitor output (VGA) on your PC to the VGA input on your touchscreen (You can also connect by HDMI - Picture + Sound combined)

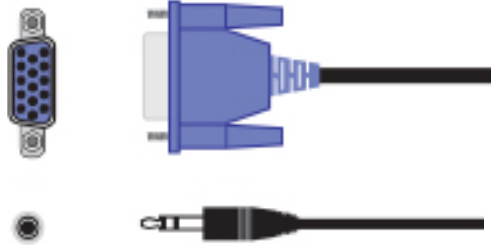


Sound from your PC

Connect a 3.5mm audio cable from your PC to the audio input on your touchscreen (Not required if using HDMI)




Control from your PC

 Connect a the USB cable attached to the touch-screen frame to your PC - using **ONLY** the *Active USB Extender Cable* supplied

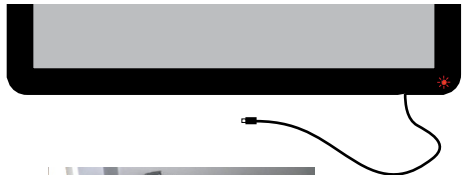

OPS Module PC

 Your touchscreen incorporates an OPS module PC dock and connection if you want to use an OPS PC instead of desktop or notebook. Simply insert the module & turn on, power is provided internally from the LED panel. Connection to the PC is via HDMI & the USB cable must be plugged into the OPS USB input.

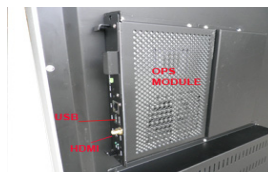


Mains Power

Connect your touchscreen to a powerpoint using an IEC cable




 CONNECTIONS & CONTROLS

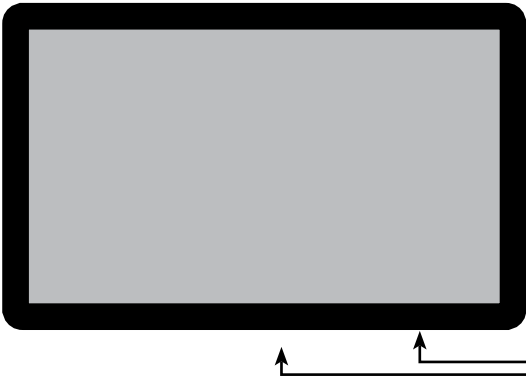

CONTROL BUTTONS
Control buttons are located on the right bottom horizontal frame

 CONNECTORS
Power (left side) and AV connectors (right side) are located on the underside of the rear horizontal frame.

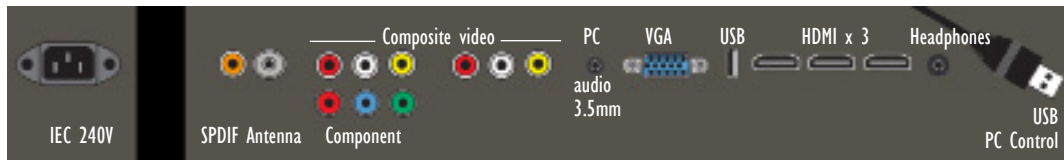

INPUTS

IEC Power	240v power from standard mains power point
3.5mm audio	Audio signal from computer
Antenna	RF signal - TV signal input
Composite	Video plus left and right audio signals input
Component	Yp Bp R input external high definition analogue signal
VGA	Analogue monitor input signal from computer
HDMI	High definition digital video and audio signal input
USB	Data input. Optional use for PC-free slideshows


OUTPUTS

SPDIF	Digital Audio output
Headphones	3.5mm Headphone jack

NOTE:

- **Precautions when connecting to other equipment**
- When using external equipment with this TV set, please read the instruction manual of the external equipment.
- Switch off all power supplies to the equipment and TV set before connection. Always ensure that the input and output terminals are correctly connected.

 SWITCHING ON

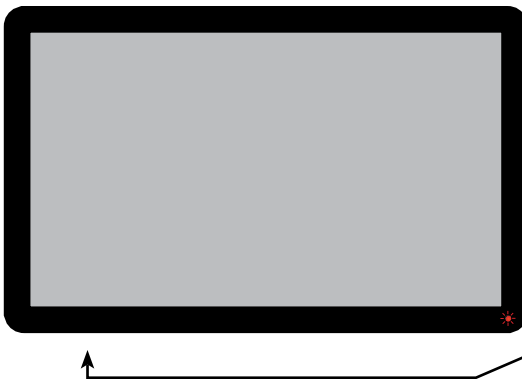

POWER button
Indicator lights:
RED - Standby
BLUE - System ON

 
IEC POWER SOCKET
Connect 240V IEC power
plug here

After checking power connections are correct, switch power ON using the power button on the remote (see page 9 for diagram of remote buttons).

Alternatively, locate the CONTROL BUTTONS on the right lower side of touchscreen frame and press the POWER button (see diagram below). The indicator light in the lower right hand corner will change from Red (Standby) to Blue (System On).

Changing which source is displayed

1. Using remote, press Source, use Up/Down arrows to select source & press OK.
2. Using panel, press AV/TV, press CH+ or CH- to scroll through source list and press either VOL+ or VOL- to OK selection

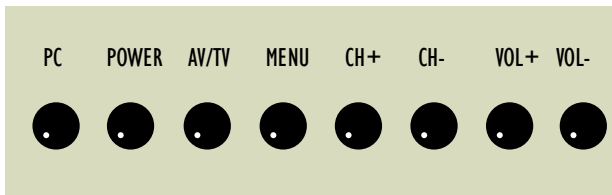

Note: PC button only used
with embedded PC option.

Driver Options:

- If you are using Windows 7 / 8, a driver is not required to activate “touch” interactivity. Simply plug in, wait for the USB recognition & the touchscreen should be ready for use, Reboot your PC with the USB connected if you have any issues.
- If you are using Windows XP, you must use the driver [Setup Multi-TouchScreen Server V2.7.exe](#) on the setup disc. To load the driver, double click on the file & follow instructions to load onto your PC. When installed, the USB icon is green when connected to the touchscreen & working; grey when not connected and/or working. Note that XP will NOT operate in dual touch mode. You must click on the green USB icon, click Settings & set to “single touch”. Click on Calibrate to calibrate your screen. XP is no longer recommended as it was designed for touch operation and Microsoft are stopping all XP support from April 8, 2014.

CALIBRATING YOUR TOUCHSCREEN

Driver-free Windows 7 and 8

As Windows 7 does not require a separate driver to actuate touch, you can skip the driver install step, and proceed directly to calibration and begin using your touchscreen.

See Driver Options for optional Win7 driver.

Calibration: Windows 7 / Windows 8

 
Step 1. Open **Control Panel**

Step 2. Click **Hardware and Sound**




You should see **Tablet PC Settings** on a list of options.

Step 3. Click **“Calibrate the screen for pen or touch input”**

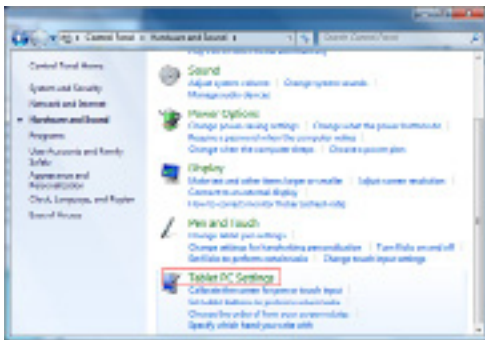

Step 4. Click **“Calibrate...”**

 
Then reset Restore Defaults

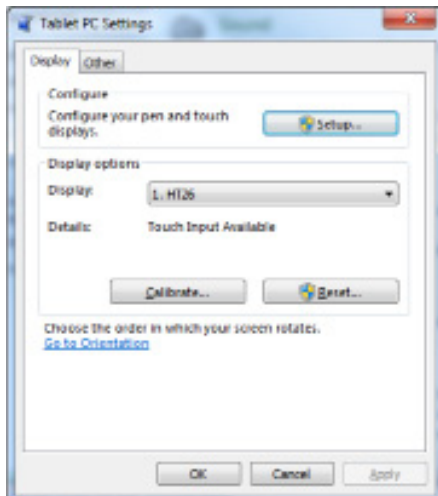

Step 5. Calibration

Tap the crosshair each time it appears on-screen. Starts L to R, top to bottom.

 Initial calibration sets 16 points. Subsequent calibrations only require 4 points.

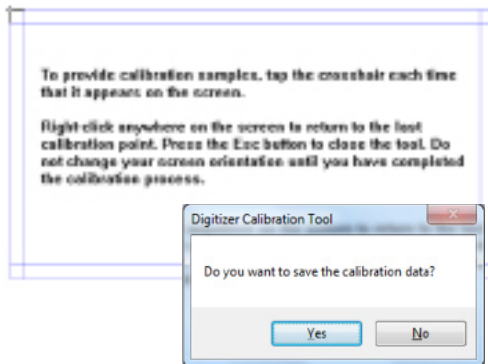

When finished SAVE or to re-do click RESET.

Multitouch & Gesture Control:

Win 7 & Win 8 operating systems will operate in multitouch (10 point writing touch touch) in programs that are multitouch activated, such as Windows Paint. ABI's Activetouch software can also be used in Multitouch mode. Gesture controls such as Zoom In, Zoom Out, Page Scroll also can be used .

Insert The Batteries

1. Remove the battery cover by pressing it and sliding it down.
2. Insert the two 1.5V (AAA size) batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Replace the battery cover by sliding it in until you hear a click sound.



Precautions when using batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
- Note that there are chargeable and non-chargeable batteries. Do not attempt to charge non-chargeable batteries.
- Remove the batteries from the remote control unit if you do not intend to use the unit for a long time.

Precautions when using the remote control unit

- Do not drop the remote control unit.
- Do not subject the remote control unit to physical shocks.
- Keep the remote control unit dry. Wetting it may cause the unit to malfunction.
- Replace the batteries with new ones when operation of the unit deteriorates.

REMOTE CONTROL FUNCTIONS



1. POWER - Switch on TV
2. INFO - (e.g. Channel, TV system)
3. ZOOM - Aspect Ratios / USB - enlarge photo
4. Mute sound
5. P. MODE - Picture Mode
6. S. MODE - Sound Mode
7. SLEEP - Set Sleep timer
8. ECO - Power saving mode
9. TV - Digital TV mode
10. AV - AV source
11. USB - USB source menu
12. S-VIDEO - Not used
13. HDMI - HDMI source
14. YPBPR - Component source
15. VGA - VGA source
16. AUTO - Resynchronise picture in VGA mode
17. SOURCE - Source Menu
18. AUTOSCAN - Scan for channels (Hold for 3 mins)
19. Navigation Arrows
20. OK - Confirm selection

(Continued overleaf)



21. MENU - OSD menu or previous menu
22. EXIT - Quit current selection
23. Channel buttons 0 - 9
24. Previous channel
25. FAV - Favourite channels list
26. VOL - Sound volume
27. PG UP - Last list item in USB mode
28. PG DOWN - Next list item in USB mode
29. FAV+ - Select favourite channel
30. FAV- - Select the following favourite channel
31. CH - Cycle through channels
32. Play/Pause - USB Video mode
33. Skip backward - USB Video mode
34. Skip Forward - USB Video mode
35. Stop - USB Video mode
36. HOME - Return to start USB mode
37. Backward - USB Video mode
38. Forward - USB Video mode
39. ROTATION - Rotate picture in USB mode
40. Red - Not used
41. Green - Not used
42. Yellow - Not used
43. Blue - Not used

TROUBLESHOOTING

Please make these simple checks as indicated (●) on the chart for the respective symptoms and their possible remedies.

Symptoms	Possible Remedies									
	Try different channel, if OK, probably station trouble	Check aerial connections on back of set	Check aerial for broken wires	Re-orient aerial(if indoor type)	Probably local interference, such as an appliance	Adjust fine tuning control	Adjust brightness control	Adjust contrast control	Check if station is broadcasting colour	Adjust colour control
No picture, no sound	●	●	●			●				●
Poor sound, picture OK	●			●	●	●				●
Poor picture, sound OK	●	●	●	●	●	●	●			●
Weak picture	●	●	●	●		●				●
Blurred picture	●		●	●		●				●
Double image	●	●	●	●		●				
Lines in picture	●		●	●	●	●				
Distorted picture	●		●	●		●				●
Weak reception on some channels	●	●	●	●	●	●				●
Horizontal bars			●	●	●					
Picture rolls vertically	●		●	●	●					●
Poor colour	●	●	●	●	●	●	●			●
No colour	●	●	●	●		●			●	●
Misoperation of Remote control										
Remote control unit no operation										●



A Brighter Image Pty Ltd ABN 498 205 091 42
PO Box 1250 BROOKVALE NSW 2100
Phone: 02 9938 6866
Email: info@abimage.com.au