EXECUTIVE OHP TROLLEY
ASSEMBLY INSTRUCTIONS

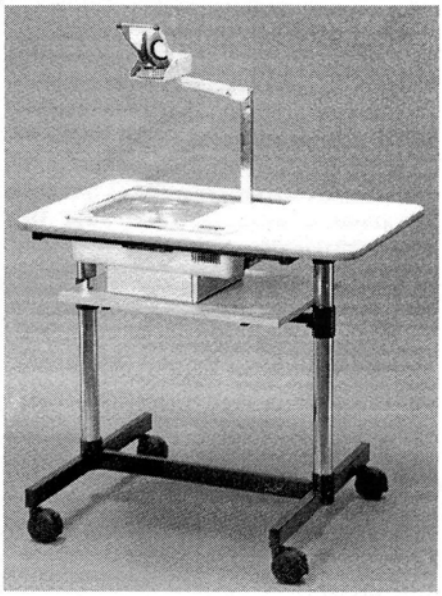

PARTS SUPPLIED

1 X Base (no shelf)
2 x Chrome columns
1 x Small shelf assembly
1 x Large shelf assembly
1 x Box Components containing:
- # 4 x Rubber Castors
- # 4 x Black Plastic Stoppers
- # 4 x Nuts & 4 x Black spring washers
- # 4 x large flat washers
- # 12 x Grub Screws
- # 1 x Allen Key
- # 1 x Metal Spanner

ASSEMBLY

1). Remove contents from packaging to ensure all parts supplied are correct. Lay all parts on the floor.
2). Start with base. Place flat washer on castor, push through hole in base, add spring washer inside base and screw on the nut. Tighten with the spanner. Repeat for all 4 castors. Push stoppers in ends of base to hide nuts.
3) Fit chrome columns into base.
4) Carefully fit small shelf assembly over columns (after locating grub screws in shelf) and slide down to rest on base.
4). Fit large shelf assembly onto chrome columns.
5). Raise middle shelf to required position and tighten grub screws using allen key.
6). Tighten top shelf grub screws using allen key.
7). Tighten base grub screws using allen key.
8). Finally ensure the unit is secured tight and tape Allen Key to underside of shelf for future use.

HINT

Two people may be required when adjusting the middle shelf into position.

Your Executive OHP Trolley is now complete.

For your convenience, ABI manufactures a range of other trolleys or additional shelves to fit this model. For further information, contact your local Dealer or ABI.

Manufactured By:

abi
a brighter IMAGE Pty Ltd
6/16 Ada Avenue (PO Box 1250)
BROOKVALE NSW 2100
Tel: 61-2-9938-6866 **Fax**: 61-2-9938-6899
Email: info@abimage.com.au **Web**: www.abimage.com.au